

- 1. details are based on best practices
- 2. check with roofing manufacturer for system specific requirements




Green Roof over EPDM - Wall Transition

Scale: 3" = 1'-0"



www.greenroofsolutions.com

4336 Regency Drive Glenview, IL 60025

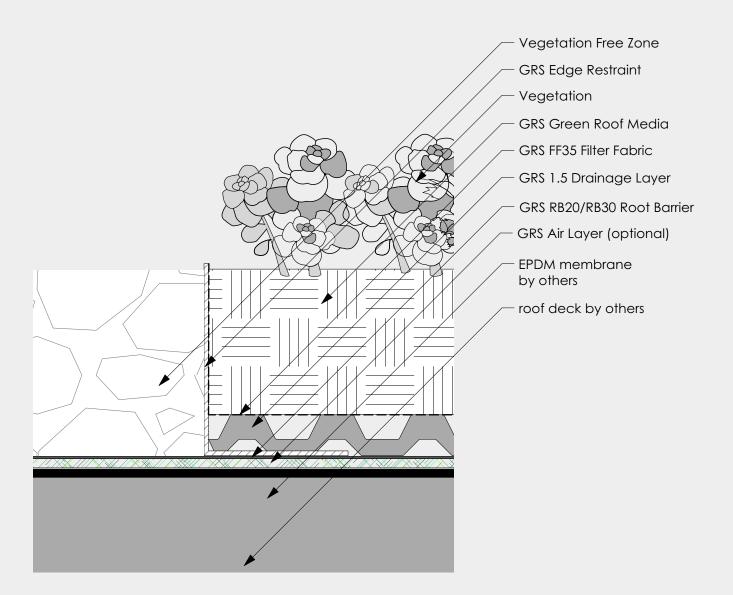

General Notes

- 1. details are based on best practices
- 2. check with roofing manufacturer for system specific requirements




Green Roof over EPDM - typical

6'' = 1'



www.greenroofsolutions.com

4336 Regency Drive Glenview, IL 60025

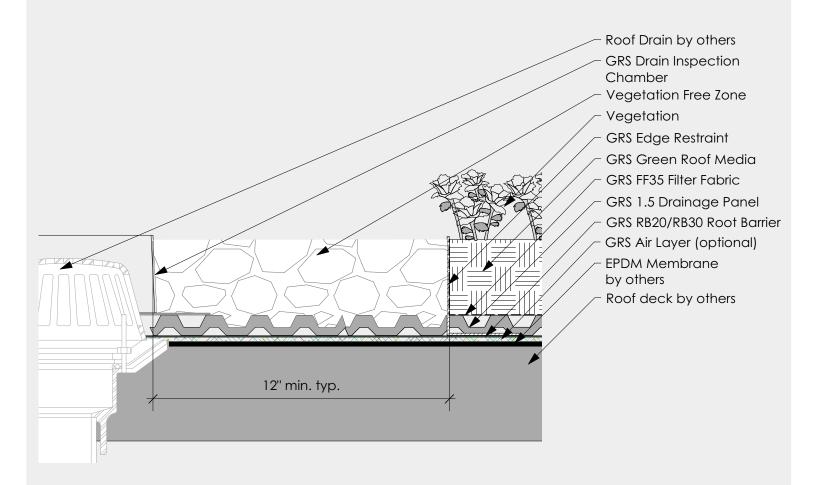

Notes:

- 1. details are based on best practices
- 2. check with roofing manufacturer for system specific requirements




Green Roof over EPDM - Drain Transition

Scale: 3" = 1'-0"



www.greenroofsolutions.com

4336 Regency Drive Glenview, IL 60025

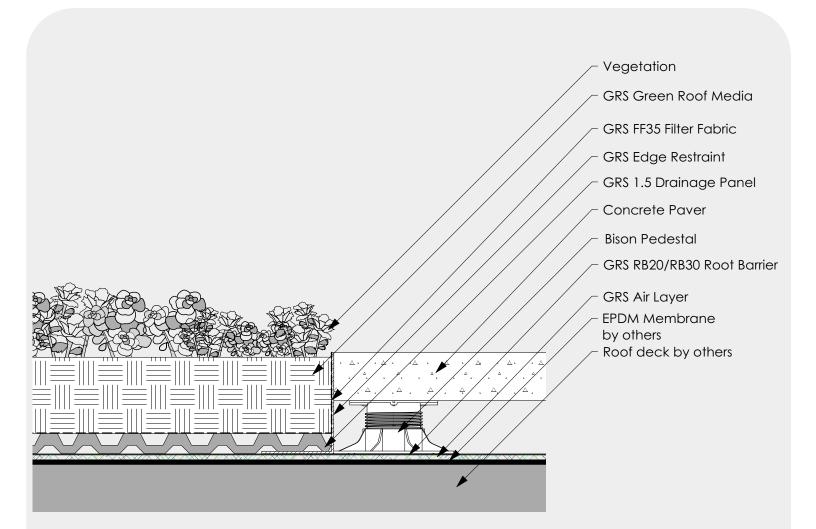

Notes:

- 1. details are based on best practices
- 2. check with roofing manufacturer for system specific requirements



Green Roof over EPDM - Paver Transition Scale: 3" = 1'-0"



www.greenroofsolutions.com

4336 Regency Drive Glenview, IL 60025